


## CONNECTIONS & CONFIGURATION

The configuration jumpers can be disabled by entering the installer keypad code **4020\*#**.

J3 is enabled only if the configuration jumpers are enabled and the display is set using the keypad to show GOOD, CHECK or BAD, (factory default).

Fence Installation Test Mode Select		LC Display Information Select		Switch Input Function Select		
J4	Description	J3	Description	J2	J1	Description
Off	Test mode disabled	Off	Show GOOD, CHECK or BAD	Off	Off	Gate Switch Input
On	Test mode enabled	On	Show Vp Out, Vp Ret	Off	On	Remote On/Off Input
				On	Off	Panic Button Input
				On	On	High/Low Power Input

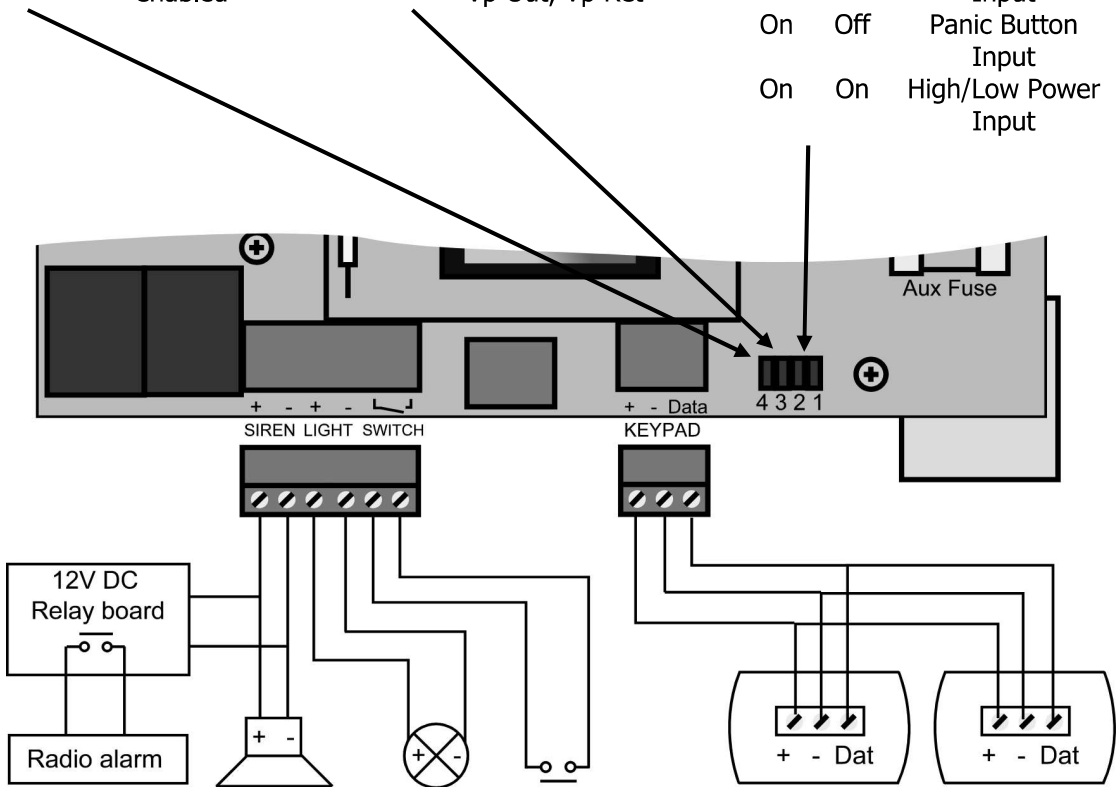

20W max  
12V DC  
Siren

12V DC  
Strobe  
light

Gate SW  
or  
On/Off SW  
or  
Panic SW  
or  
Hi/Lo SW

Maximum of two Nemtek  
Druid LCD keypads and  
100m of comms cable.